



Notes:

1. Install such that its vent opening is above grade, above the calculated 100-year flood water level and above the highest recorded water level
2. Install such that valve is readily accessible for inspection, maintenance and replacement
3. Install such that valve is not exposed to rainwater or runoff, vandalism, and birds, insects, rodents, or other animals
4. Install valve pursuant to AWWA Standard C512-04 and Manual M51 (2001)

NOT TO SCALE

**STANDARD
DETAIL**

DATE: 08/12/08

CITY OF BRISBANE
DEPARTMENT OF PUBLIC WORKS

**ABOVE GROUND
AIR RELEASE VALVE**

W - 1